

Viton O-ring Kit Installation Instructions

Step 1:

Remove filter head from truck. Remove 3 #20 torx screws on the top of the filter.




Step 2:

Replace with the largest o-ring provided. Re-install pump cover with the 3 #20 torx bolts.



Step 3:

Turn housing over and remove the two #20 torx bolts.

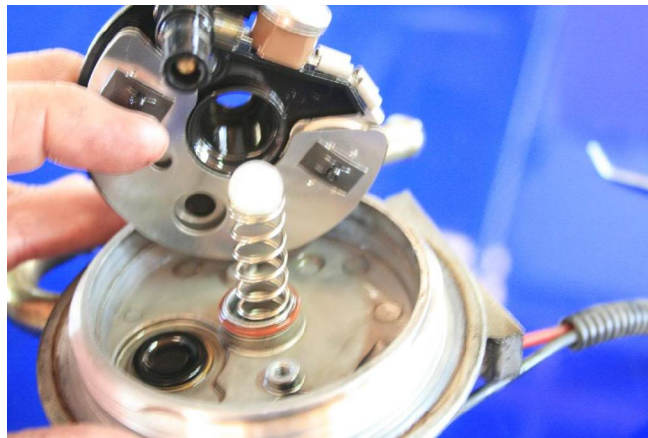

Step 4:

Replace the second largest o-ring with o-ring provided. If you are installing a Nicktane Billet Aluminum Filter Adapter please discard the spring and plastic white check ball now.



Step 5:
Replace third largest o-ring with o-ring provided.



Step 7:
Replace smallest o-ring on bleeder screw with o-ring provided.



Done!